 


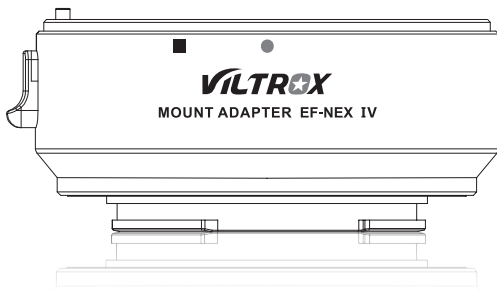

EF-NEX IV MOUNT ADAPTER

 


Thank you for choosing Viltrox mount adapter !

* Before setting the Viltrox mount adapter on your camera, please read this manual carefully for your proper or better use of the adapter.



EF-NEX IV MOUNT ADAPTER

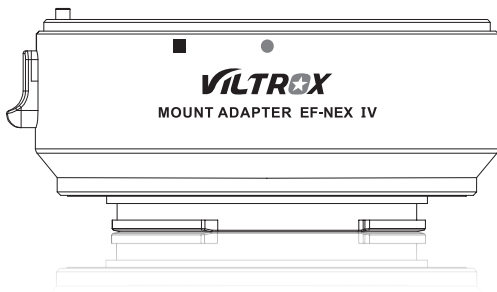

Thank you for choosing Viltrox mount adapter !

* Before setting the Viltrox mount adapter on your camera, please read this manual carefully for your proper or better use of the adapter.



Pengenalan

Viltrox EF-NEX IV is designed for Canon EF Lenses to be used on Sony E mount series mirrorless cameras. It is compatible with Sony A7 series full frame cameras, featuring functions of Auto focus(PDAF&CDAF). It can be upgraded by USB port.

Usage of Focus Mode Switch (PDAF&CDAF):

1. Before using, please confirm the focus mode of the lens mount adapter, and then attach it on the camera.
2. If you need to change the focus mode, please take the adapter ring off, slide the focus mode switch, and attach it on the camera then.

Attentions

1. After mounting the adapter on the lens and setting the MF mode to AF mode, if autofocus still doesn't work, please restart the camera.
2. The lens performance won't be affected with the adapter mounted.
3. Please use the switch on the lens to set the lens function.
If the settings in camera menu differ from those on the lens, settings on the lens shall prevail.
4. When the lens you use is much heavier than the camera, be sure to hold the lens when moving the camera or shooting.
Since the minimum focusing distance will increase with the adapter mounted, the maximum magnification and field of view may change.



Bagian Produk

EF Lens mounting index

EF-S Lens mounting index

 
 
Lens release lever

Contacts (Lens side)

Tripod mount knob

Tripod mount screw

Tripod socket

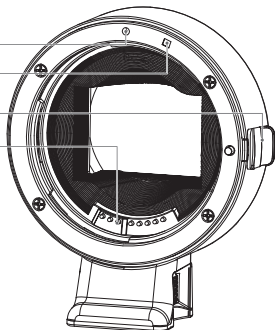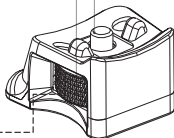



USB upgrade port

Camera mounting index

Focus mode switch
(CDAF & PDAF)





Contacts (Camera side)

  Tripod mount socket

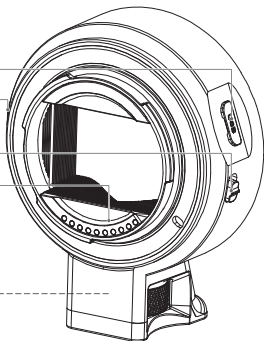



Memasang / melepas adapter

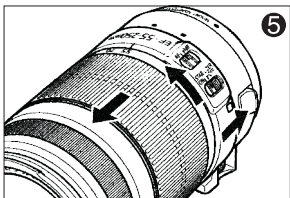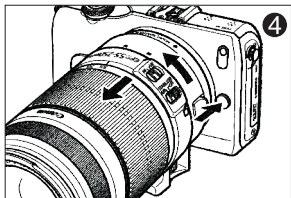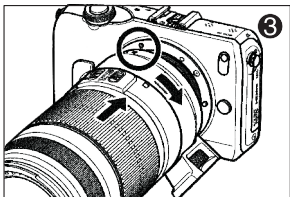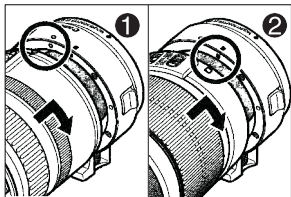    

© Mounting procedures

1. Attach the EF lens to the EF mounting groove of the adapter.

Insert the lens into the adapter by aligning the mounting index on the EF lens (red dot) with the same mark on the adapter, and turn the EF lens clockwise until you hear a click. (fig. ①)

When attaching an EF-S lens, align the mounting index marks (white squares) and turn the lens clockwise. (fig. ②)

2. Mount the adapter to the camera.

Insert the adapter into the camera by aligning the Sony E-mount lens mounting index on the adapter (white dot) with the same mark on the camera, and turn the adapter counter-clockwise until you hear a click. (fig. ③)

© Detaching procedures

1. Turn the camera OFF, and detach the adapter from the camera while the EF lens is still attached to it.

Turn the adapter counter-clockwise to the end while pushing the camera lens release button. (fig. ④) then detach the adapter from camera.

2. Detach the EF lens from the adapter.

Turn the EF lens counter-clockwise to the end while pushing the lens release lever on the adapter (fig. ⑤), then detach the lens from the adapter.



Memasang mount tripod

1. Mount the attached tripod mount to the adapter by firmly tightening the tripod mount knob.
Please make sure that the tripod mount and the adapter are mounted to the right directions.
2. When using the tripod mount to set the adapter on a tripod, firmly hold the adapter so as to set it securely onto the tripod.
3. Precautions when using this adapter with a tripod.
When shooting with a tripod, use the attached tripod mount of the adapter instead of the camera's.



When using a tripod with EF lenses that are equipped with a tripod mount, such as super telephoto lenses, please be sure to use it to mount the lens to the tripod.

Attention: Before upgrading, please detach the mount adapter from camera in case that will influence the camera performance.

Method of firmware upgrading:

1. Connect the mount adapter to computer with a USB cable;
2. With upgraded files downloaded to the drive of the device, U disk will automatically reset and the original files will be deleted. Upgrade is completed.



Spesifikasi

Compatible lenses	Canon EF / EF-S series lenses
Compatible cameras	Sony E-mount series cameras
Focus mode	Auto focus
Tripod Socket	Cu1/4" × 1
Firmware upgrade	USB upgrade port
Diameter and Length	66.6mm × 26mm
Weight	Approx. 174 g
Front cap	Camera cover
Rear cap	Lens dust cap

Shenzhen Jueying Technology Co.,Ltd.

www.viltrox.com

2/F,Blk 4, Baokun Science and Technology Industrial Park, Xialingpai,
Dalang Str.,Longhua,Shenzhen,China